

HP WallArt Solution 3.0

February 2015 HP WallArt Team



Enabling JDF in HP WallArt Basic Concept

JDF/RIP's Automation

More efficiency on your workflow

How can it accelerate the process?



Sends ready-to-print files directly from your web2print



RIP automatically downloads your files, without manual interaction









Enabling JDF in HP WallArt

Enter Workflow Integration settings





Company Settings	Production	Customization	Web Integration	Workflow Integration	
JDF Connection https://jdf.hpwal	lart.com/xxx	∢	When you are set Note: URL c	ing HP WallArt in your R ustomized for each HP V	RIP, you must enter this URL WallArt's user <i>(e.g. xxx)</i>

Enable JDF connectivity 🕕



Company Settings	Production	Customization	Web Integration	Workflow Integration	
JDF Connection					
https://jdf.hpwa	llart.com/xxx				
Enable JDF connecti	vity 🕕 🖣	To have JDF You need t	Automation feat o click on "Enable . ticket and have the	ure activated, you nead IDF connectivity" to be a RIP status, both in the	ed to click on this tab able to download JDF dashboard
Use single page	PDF in JDF job tick	et 🕕 占 Then, all	the other options	will be visible	







Company Settings	Production	Customization	Web Integration	Workflow Integration	
JDF Connection					-
https://jdf.hpwal	lart.com/xxx				
Enable JDF connective	vity 🕕				
<mark> </mark>	entication 🕕				
Use single page	PDF in JDF job ticke	ıt 🕕 ৰ Clic	k here if your want to h with no	have the JDF job ticket with a PI trim lines or tiling)F file









Only for Caldera Version 10

Note: You need to have a Bridge-enabled key license. Configure CALDERA Bridge in order to use HP WallArt in CALDERA RIP in Special > Bridge Configuration Menu







Only for Caldera Version 10

2

Create a new configuration module

Bridge Configuration					
	Global				
Sender ID :	CalderaBridge				
Base URL:	http://192.168.1.35				
Port :	8080 *				
Threads :	4				
Configuration modules Name HTTP Hotfolder User New Delete					
Edit.					
✓ VisualRemote					
Fileman parameters					
Bridge status : Running Apply Close					





Only for Caldera Version 10









Only for Caldera Version 10

4

Fill in the required fields Company Settings Production Customization Web Integration Workflow Integration Bridge Module Configuration JDF Connection : HP WallArt Queue Name https://jdf.hpwallart.com/digitalprinting Image bar tab : Current Enable JDF authentication (i) Use single page PDF in JDF job ticket () Send to : None Enable JDF ticket download () JDF Link URL : https://jdf.hpwallart.com/xxx **Connect to another Print Service Provider** User : caldera Enable redirection () Hold incoming jobs Fileman parameters... 🔩 Support | English 👻 | Sign in/Register 👻 Job types Email email address WallCovering WallPoster Password WallDecal password Canvas Forgot password? Resend confirmation link ✓ Use authentication User login : UserName New User? Create your account Password : Password HP WallArt Cancel OK





Only for Caldera Version 10

4 Bridge Module Configuration set ups

Disable "Hold incoming jobs" if you want to open the images in Caldera automatically. With this option set on you will have to use the "Open in RIP" button in JobTracker

Bridge Module Configuration					
Name		HP WallArt Que	eue		
Image bar tab		Current			
Send to		None		_	
JDF Link URL		https://jdf.hpwall	lart.com	ı/xxx	
User	:	caldera			
🗹 Hold incomi	ng	jobs			
	Fileman parameters				
	_ ✔ Job types				
■ WallCover	ring	g ∎Wa	allPoste	r	
Canvas		∎ Wa	allDecal		
	-	Use authenticatio	on		
User login:	ι	IserName			
Password : Password					
HP WallArt			ОК	Cancel	

When "Job types" is disabled, no filtering is applied, which will load jobs of all types





Only for Caldera Version 10

5



Bridge Module Configuration					
Name	: HP Wall4	Art Queue			
Image bar tab	: Current				
Send to	: None		⊻		
JDF Link URL	: https://jdf	.hpwallart.con	n/xxx		
User	: caldera				
🗹 Hold incomin	ıg jobs				
F	Fileman parameters				
☑ Job types					
■ WallCoveri	ng	■ WallPoste	r		
Canvas		■ WallDeca	I		
	🖌 Use authe	entication			
User login:	UserName				
Password :	Password				
HP WallArt		ОК	Cancel		





Only for Caldera Version 10

6 Activate the module with Apply button

It should read "Active" for the HP WallArt module. Other messages are "Authentication denied" or "JDF Link problem". If any of those appear, check the configuration (repeat the steps above)







Only for Caldera Version 10

Restart Caldera V10 interface. There should be an icon with the same name as the new configuration module. That opens the Job Tracker







Only for Caldera Version 10

In Job Tracker, hit the refresh icon on top-right corner. That will retrieve any waiting HP WallArt job.









Only for Caldera Version 10

9 Select the job/jobs you want to download and click the blue button.



without notice.





Only for Caldera Version 10

10) The jobs will be downloaded to the RIP in the images area to be processed







Only for Caldera Version 10

The HP WallArt jobs could be sent directly to a created Workflow by selecting the "Send to" option

Bridge Module Configuration		
Name :	HP WallArt	
Image bar tab :	Čurrent	
Send to :	HPWallArt_CanvasPrint 💟	
JDF Link URL:	https://jdf.hpwallart.com/hp_125	
User :	caldera	
☑ Hold incoming	jobs	
Fil	eman parameters	
	✓ Job types	
■ WallCovering	g 🔲 WallPoster	
🗹 Canvas	□ WallDecal	
	Use authentication	
User login:		
Password :		
HP WallArt	OK Cancel	





